







/OLUME 04

decolam.in COLLECTION SERIES 1.5 mm

There Can be Colour Variation in Material From Different Batches, It is Advised to Use Same Batch Material to Avoid Colour Variations. Actual Colours of the Laminate Sheet May Vary From This Brochure.

www.decolam.in | MKTD BY: RUTVI DECOR PVT LTD





Collection Series 1.5mm is the latest range of Anti Scratch Acrylic Laminates made with 100% Virgin Material from decolam.in , which Comes with variety of colours and best quality. The sheets are 1.5mm (\pm 0.15mm) thick giving more durability and making it anti Bubble, hence giving long life, super high Gloss and also having buffing possibility.

Our warehouse









About Us

decolam.in (Rutvi Decor PVT LTD) is based in Mysore, and directly imports there products from the best vendor companies, today decolam.in supply these sheets to all major cities in South India

BUFFING:

Nothing in Life is Fully ANTI SCRATCH, Scratch comes on body skin, Vehicles and even glass. Our Acrylic Laminates are 3H to 6 H Pencil hardness tested and comes with Buffing option, even in future if any scratches comes, Buffing can be done very easily to give back the new scratchless look.







PLEASE FOLLOW THE INSTALLATION AND MAINTENANCE TIPS:

- * Before buying please check sticker on the product and ensure that you bought original product.
- * Check the laminate on the time of delivery whether it has not damaged during transportation and handling and then use for installation.
- * Before installation make sure the substrate (MDF, Plywood, Particle Board) is in good quality, with even surface and calibrated thickness.
- Clean the Substrate surface by cloth, sponge, soft brush or sand paper to make free from dust or gease.
- * Always use water based PVACP (Polyethylene Vinyl Acetate Co-Polymer) adhesive like for laminates. Stir the adhesive gently before using it and do not mix water in the same.
- * Spread the adhesive uniformly on both laminate and base substrate by brush, roller or adhesive spreader.
- * Keep at least 2MM grove between 02 pieces of laminates, so at the time of pressing it will be easy to remove air between the laminate and beast substrate. Use soft pinch roller or normal pressing technique and the pressing should be done from the middle of the panel and move towards the sided line and corners.
- * Please make sure to give sufficient amount of pressing to laminate for almost 12hrs to 15hrs to achieve full bonding strength.
- * Remove the protective film within 7-15days after completion of installation.

DO' AND DON'T'S

- * Store the laminates below 30 C temperature. To avoid the inside cracks & stretch line, do not share acrylic sheet in roll form.
- * Clean the surface of laminate with water and clean, non-abrasive cloth. We recommend cleaning with COLIN glass cleaner and soft MICRO fibre cloth.
- * Glossy surfaces recommended to use in vertical applications.
- * Do not use cleaners based on alcohol, solvent, petrol, pinewood or oil as these may damage the surface of the laminate. Do not use other than micro fibre.
- * Do not use thinner on the surface of laminates.
- * Do not place hot cookware directly on the laminate as the exposure to temperatures above 30C may cause damage to the laminate surface.
- * Outdoor application of the laminate with exposure to direct sunlight and weather conditions are strict not recommended. UV rays may de-shape the laminate.

IMPORTANT INFORMATION

AIR BUBBLE FORMATIONS ON LAMINATE:

- * Using of water based adhesive or other than PVACP (Polyethylene Vinyl Acetate Co-polymer) adhesive may also lead to air bubble after the installation Of acrylic laminates. We recommend to use adhesive.
- * Bonding of acrylic laminates under high humidity atmosphere.
- * Using uneven surface substrate (Plywood, MDF, Particle Board) Lead to at particular area of acrylic laminates and air bubble appear at that area after the installation
- * Due to uncertain weather condition, base substrate may absorb moisture and after few days of installation base substrate gradually loses moisture resulting in air bubble formation between acrylic laminate and substrate.
- * When more than 8' x 2' of Acrylic laminates is used for paneling, it can lead to air bubble after installation.
- * Lack of bonding/pressing during the time of installation of acrylic laminates may lead to air bubble.
- * Acrylic laminates should be kept evenly straight. If the laminates are in roll form, It should kept straight for minimum 48 hours and then can press and laminate on the surface for better results.

INFORMATION

- * No guarantee & no exchange in any circumstances.
- * There can be color variation in material from different batches.
- * It is advised to use same batch material to avoid color variations.
- * Actual colors of the laminate sheet may vary from this brochure.



RECOMMENDED ADHESIVE FOR PRESSING



Please open the roll immediately. Do not Pressurize While Opening Roll.



1.5 mm HIGH **DURABILITY & STRENGTH**



EDGEBANDING

ACRYLIC MATCHING EDGE BANDING 25mm x 1.3mm



USE COLIN AND LIGHTLY SPRAY ON THE SURFACE



Wipe the suface clean using a light circular motion.

Deco Bondmaster®

SPECIAL WOOD ADHESIVE FOR

PVC & ACRYLIC & CHARCOAL SHEET





Water Resistant



Durable



Strong Bonding



Heat Resistant





Anti Bubble










Mirror Laminate 1.5mm

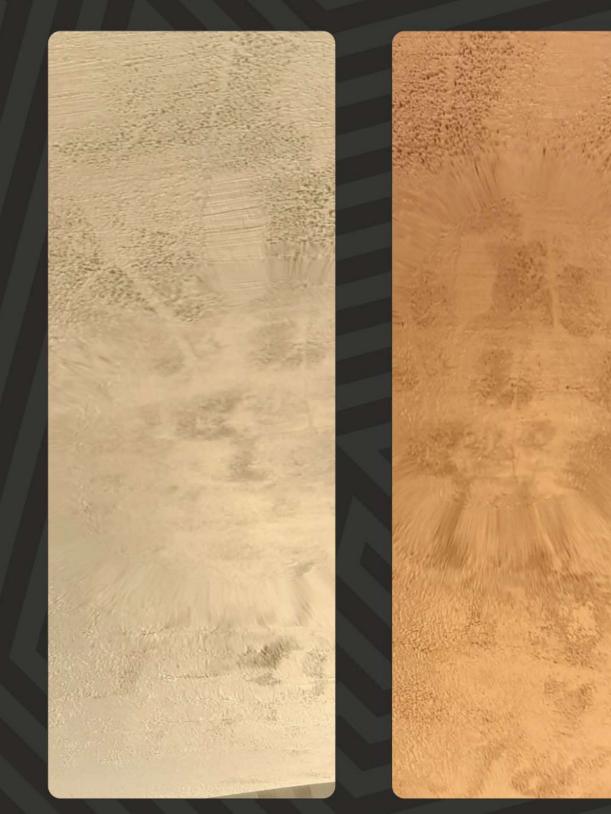



MR 101

Silver Mirror

MR 103 Copper Mirror MR 104 Rose Gold Mirror



MARDLE

Collection

Granite and Marble For Indoors. Hand Wearing Excellence.
Here, We Treat You Like Family. Imagine What's Possible.
It Starts With You.



A Design So Unique Created Tust For You!






















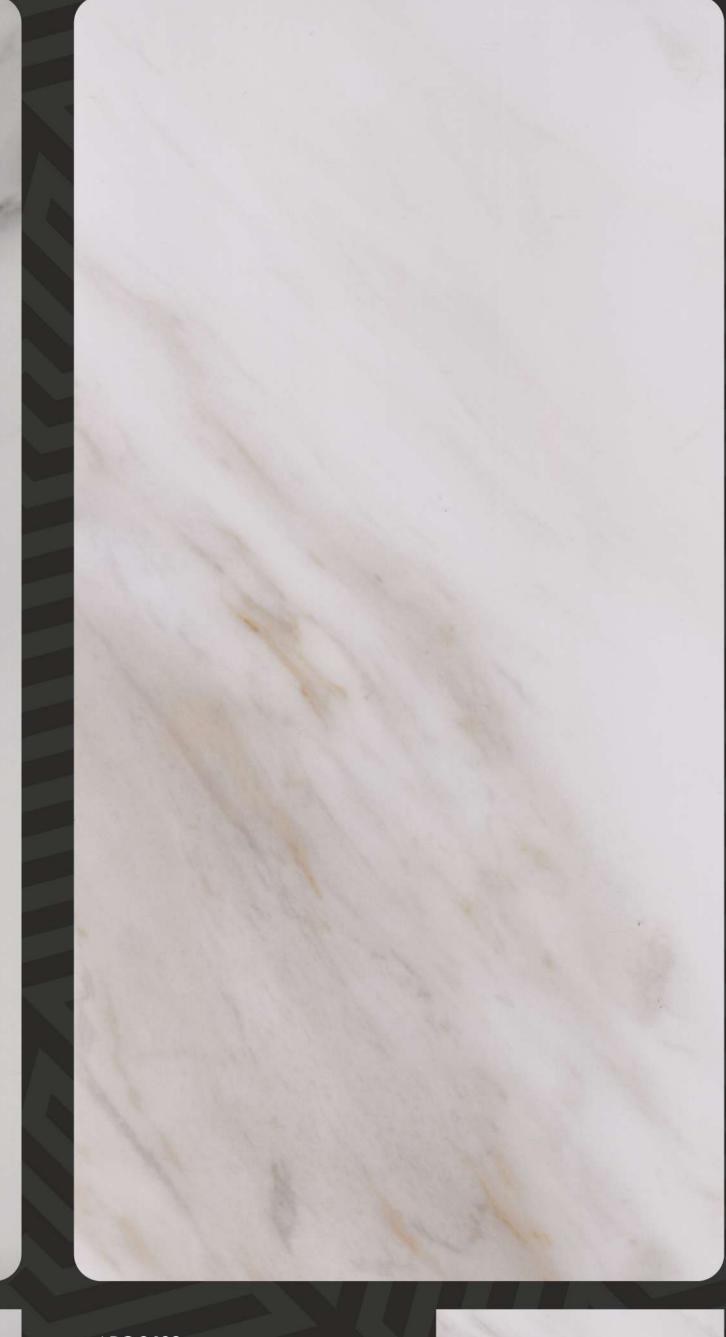

ARC 9669 porcelain marble



All You Need For Your Space.



MODEST MARBLE

















ARC 9635 DESERT COPPER ROCK



ARC 9634 COPPER ROCK

Brilliant Design For Every Lifestyle.



MODEST MARBLE
























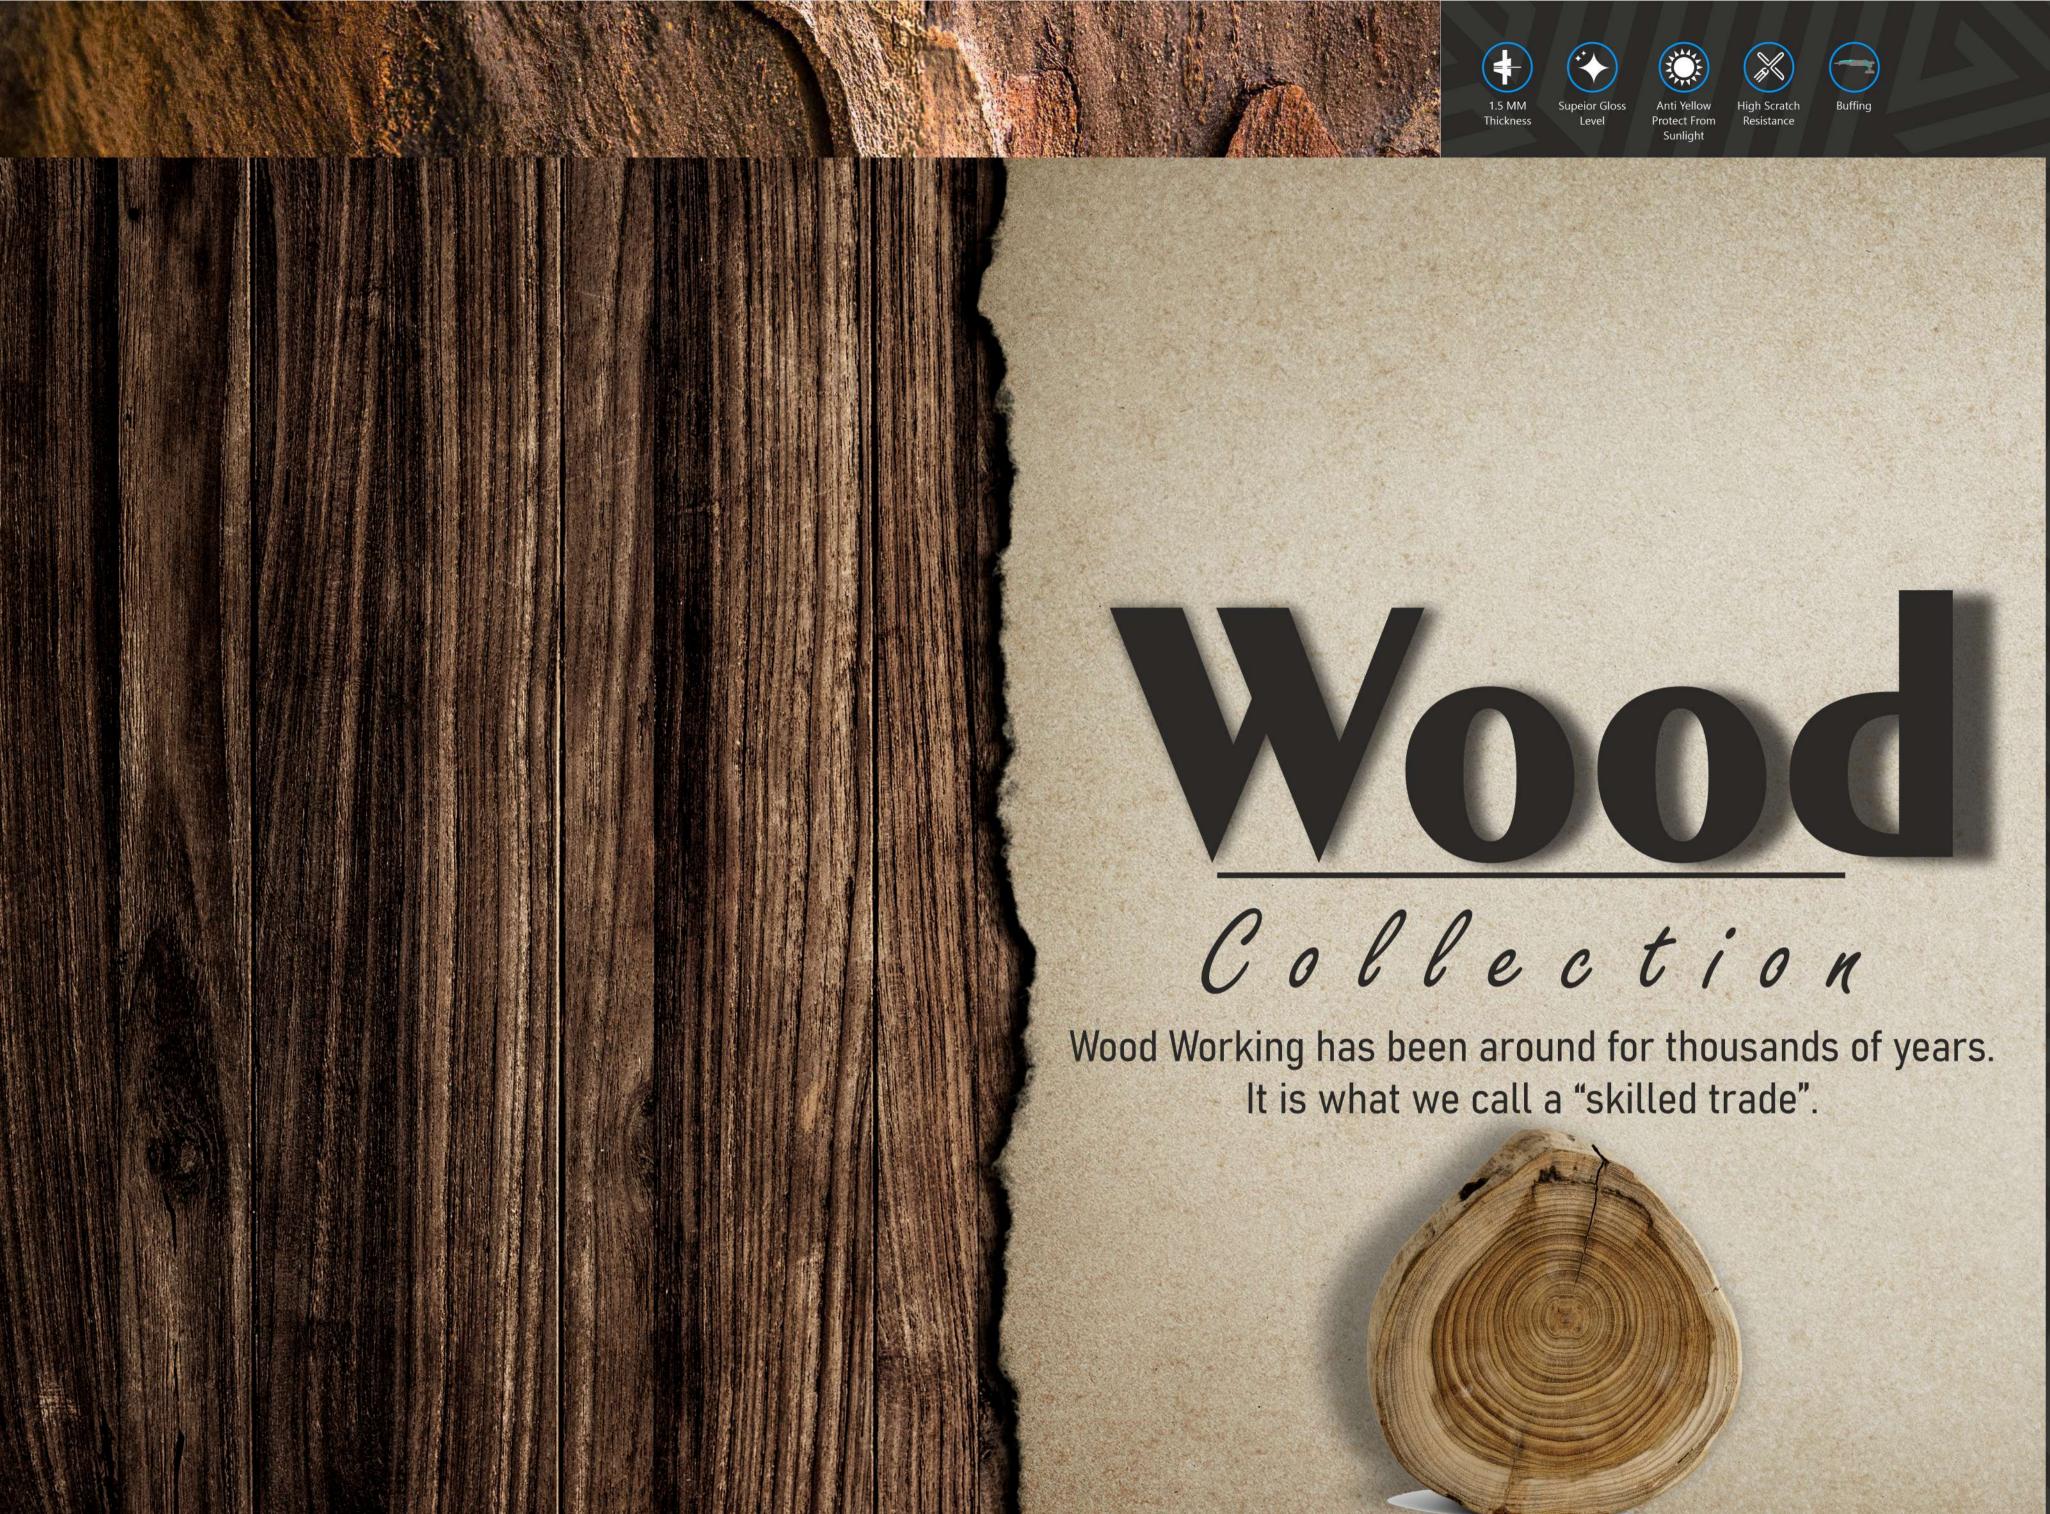





ARC 9633 Padouk Veneer



Playful, Modern, And Inspirational.


















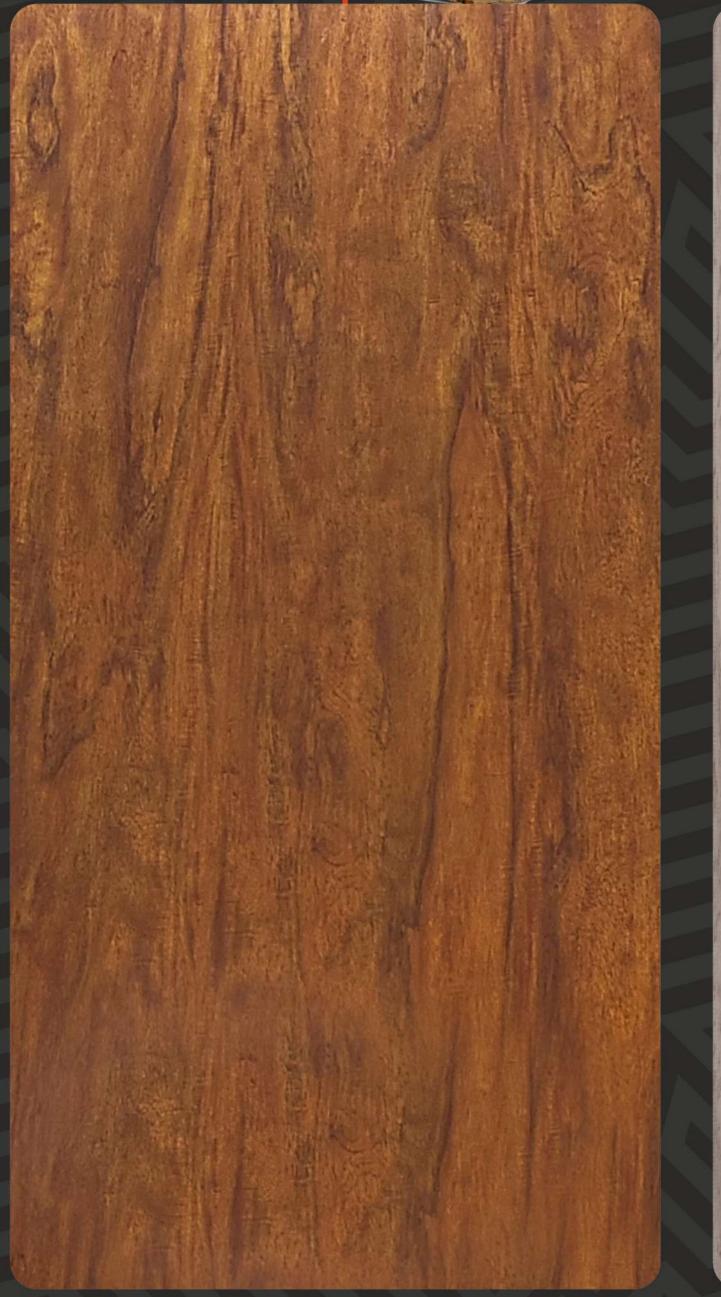



ARC 9642 Vintage Square wooden



AMERIACA WAINUT





ROCKS

Collection

The rocks have ... marched in the ranks of vast stone brigades during the ice age.

Design Dreams Made Into Reality.

decolam.in



TEXTURED ROCKS
















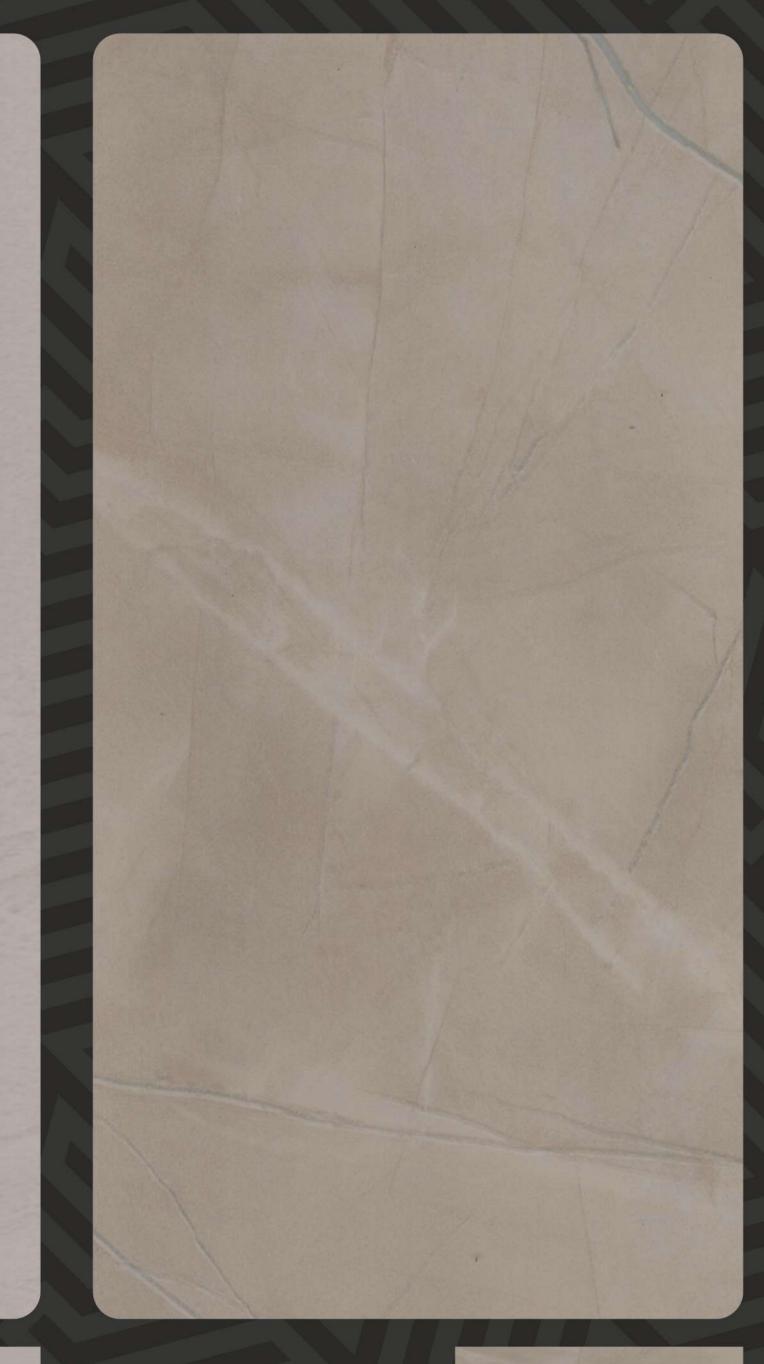



























LIGHTNING ROCK WHITE





ARTISTIC ROCKS

















ARC 9639

GRAY INKSTONE



ARC 9638

Creating The Home Of Your Dreams.



MODERN ROCKS

ARC 9629












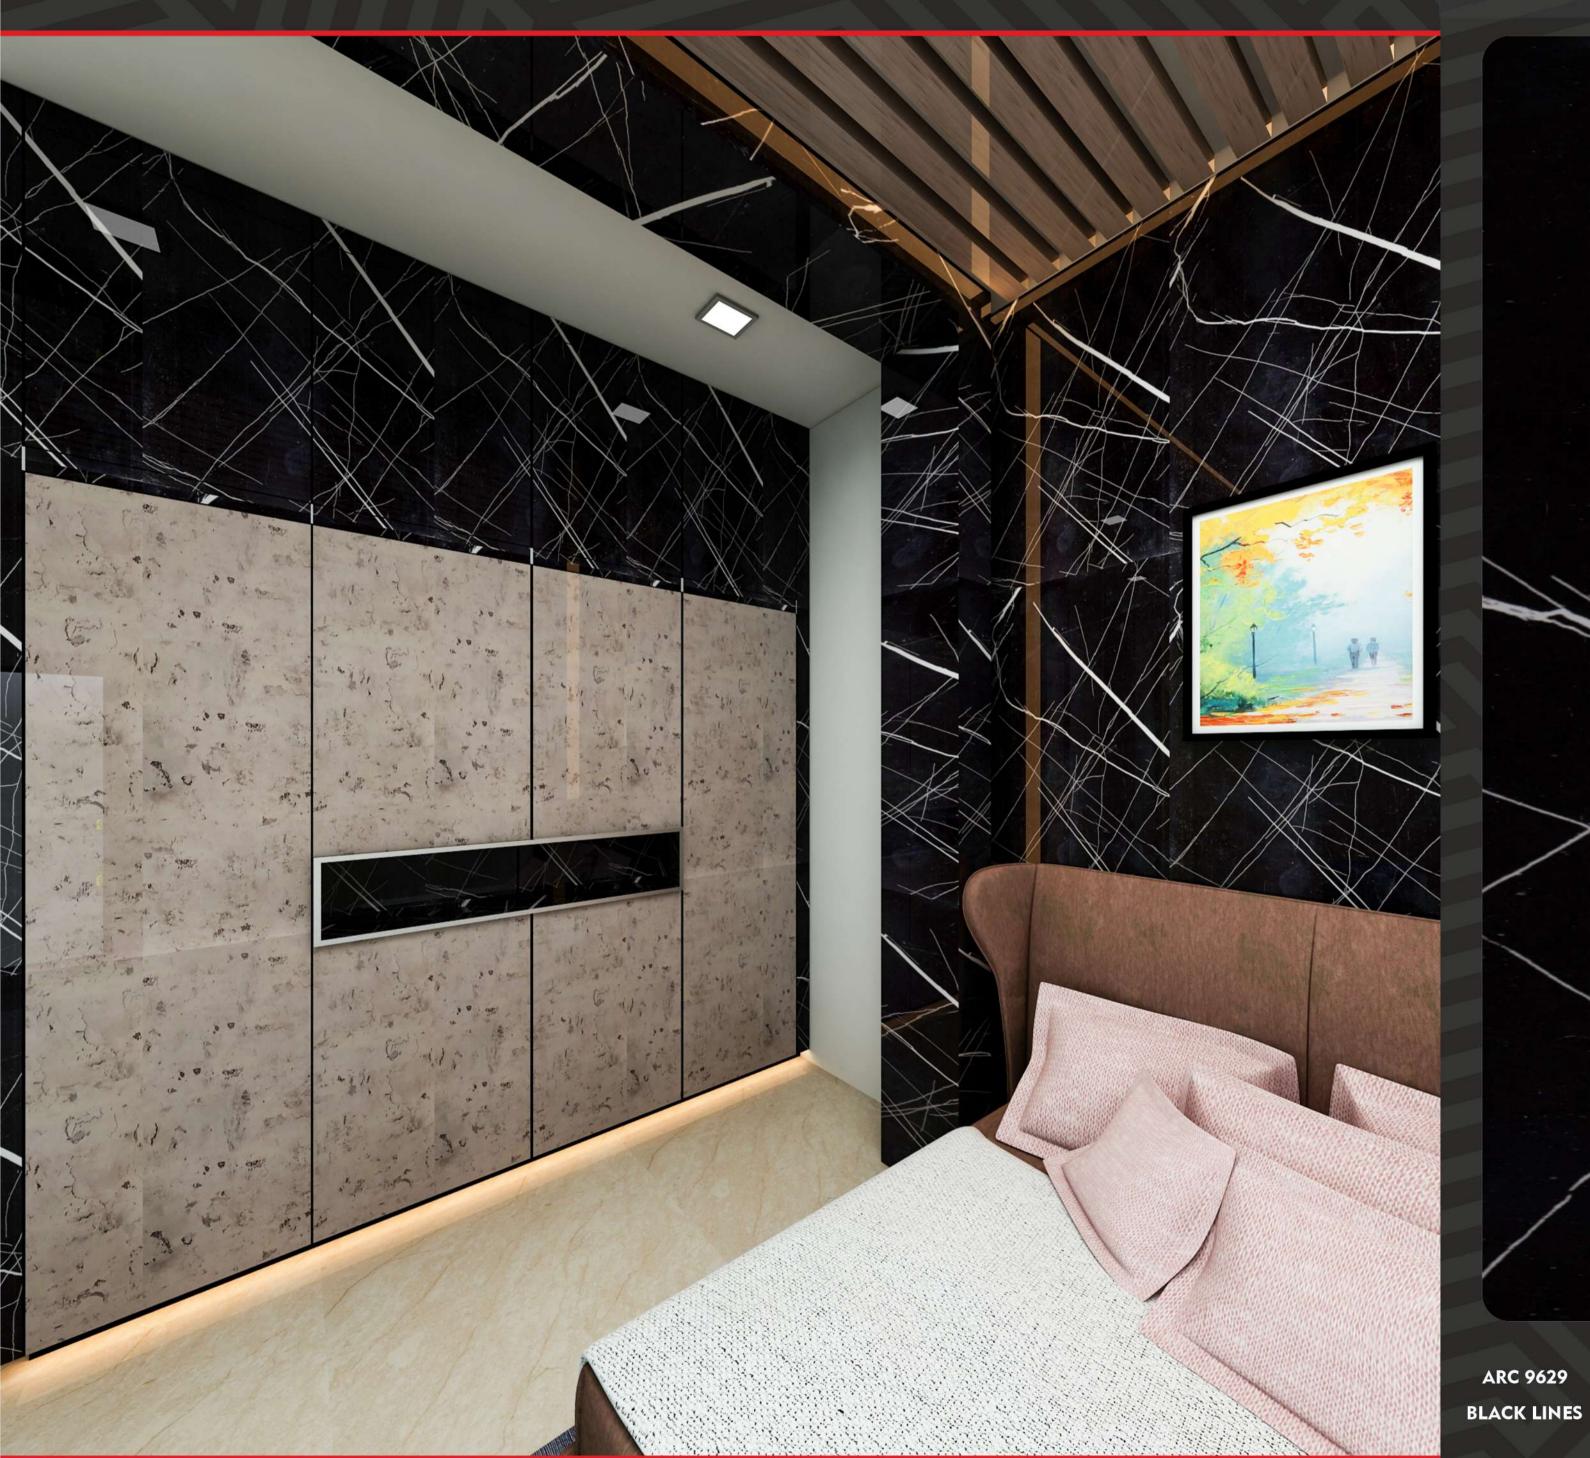





ARC 9618

Transforming Homes Into Beautiful Spaces.



Design LAMINATE

















ARC 8632





ARC 9603

BROWN BRUSH

ARC 9690












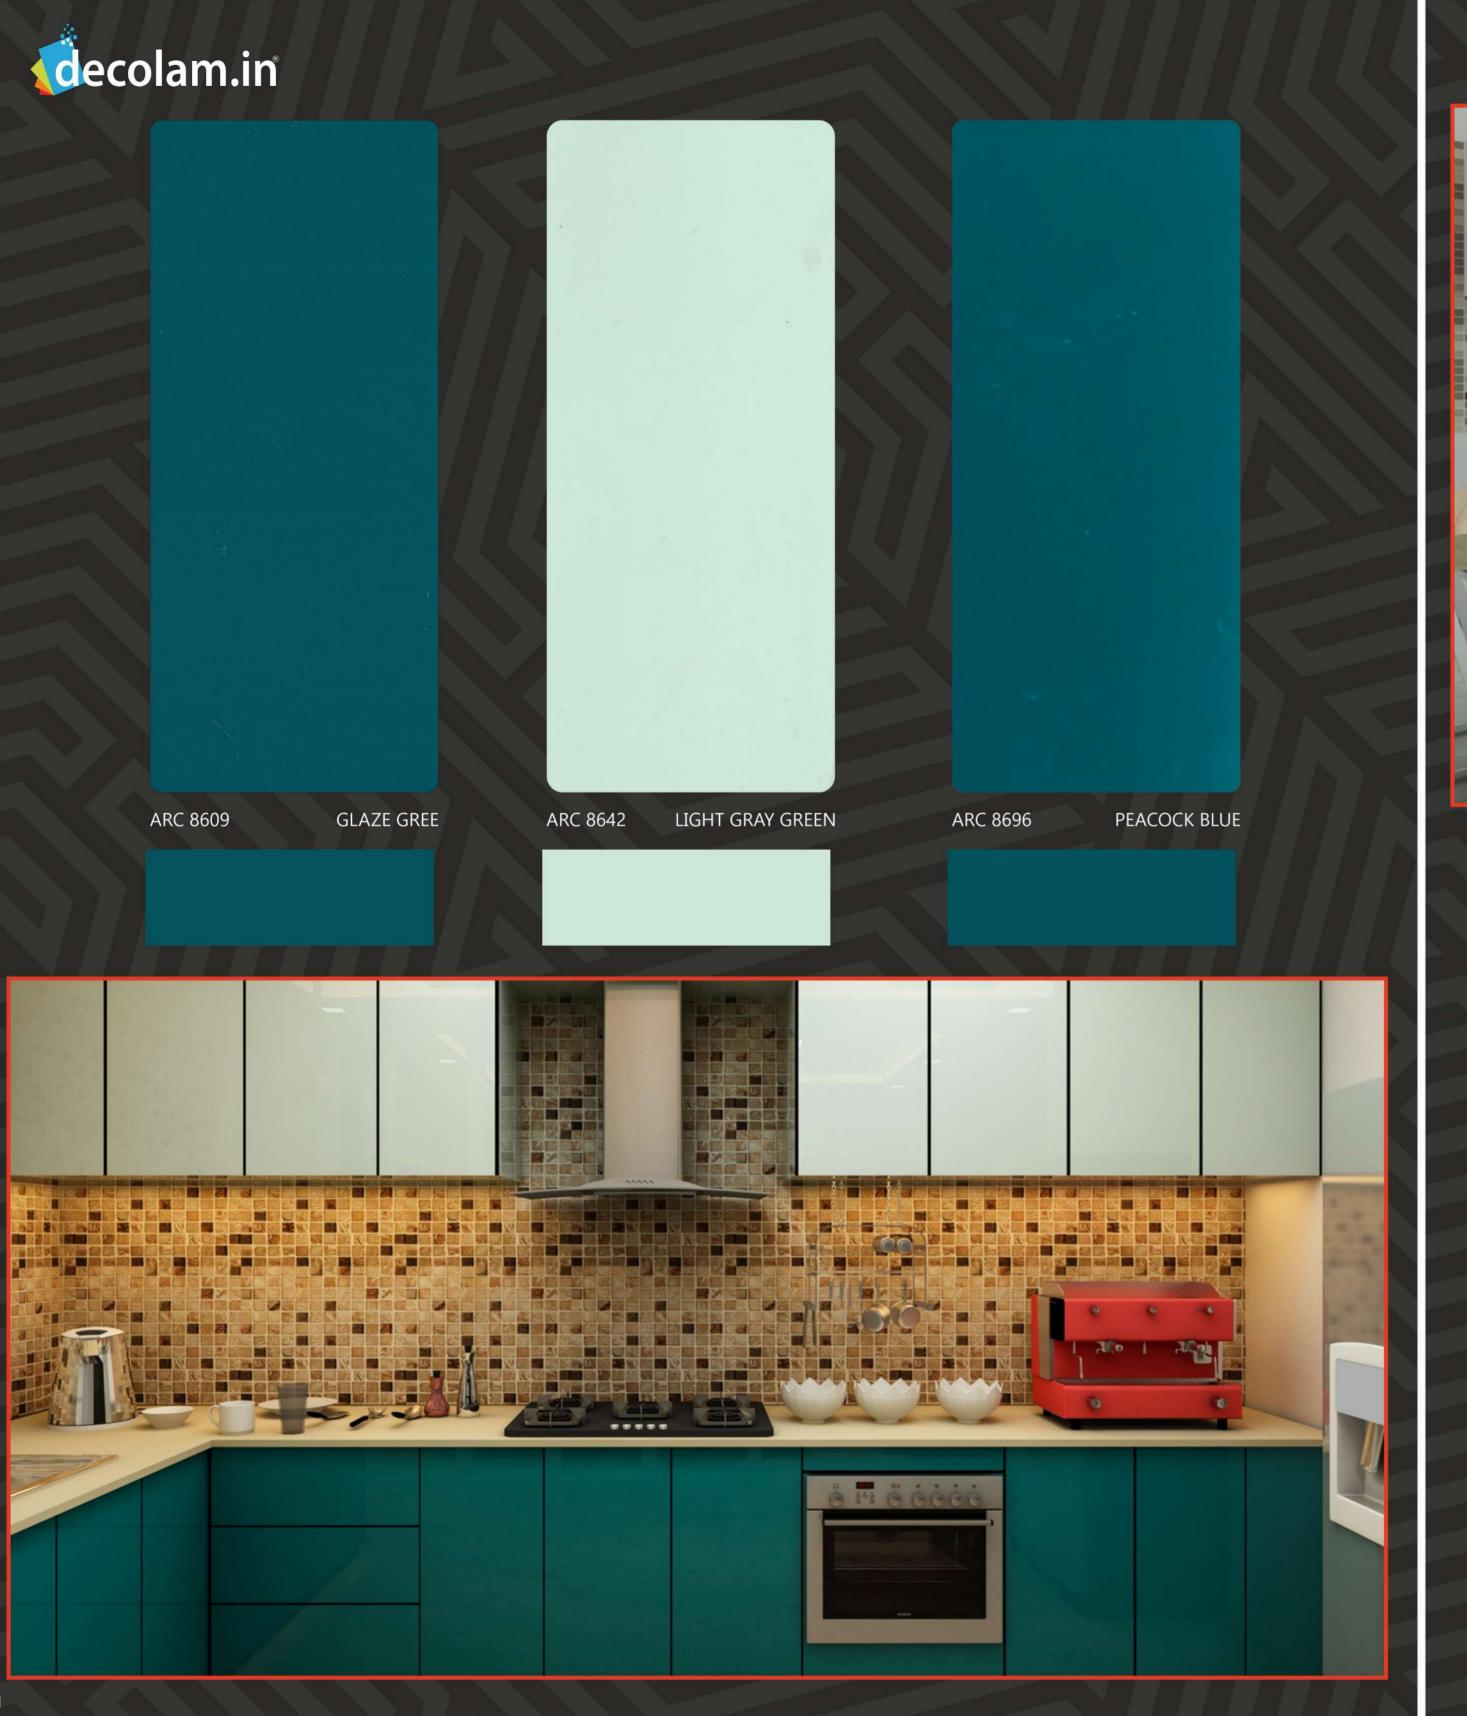












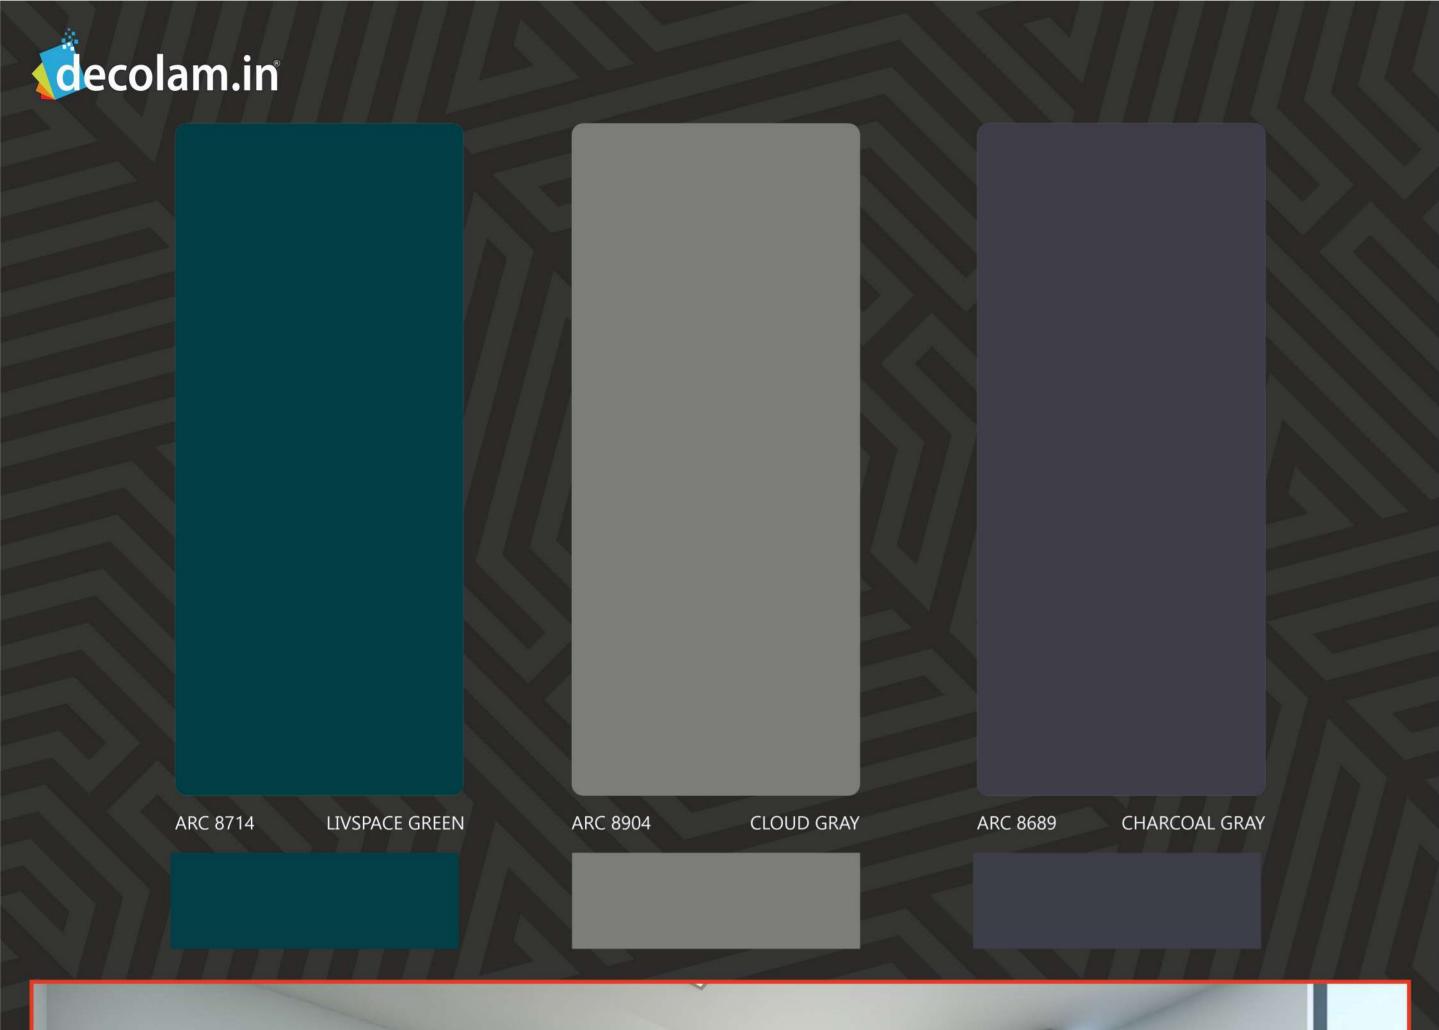






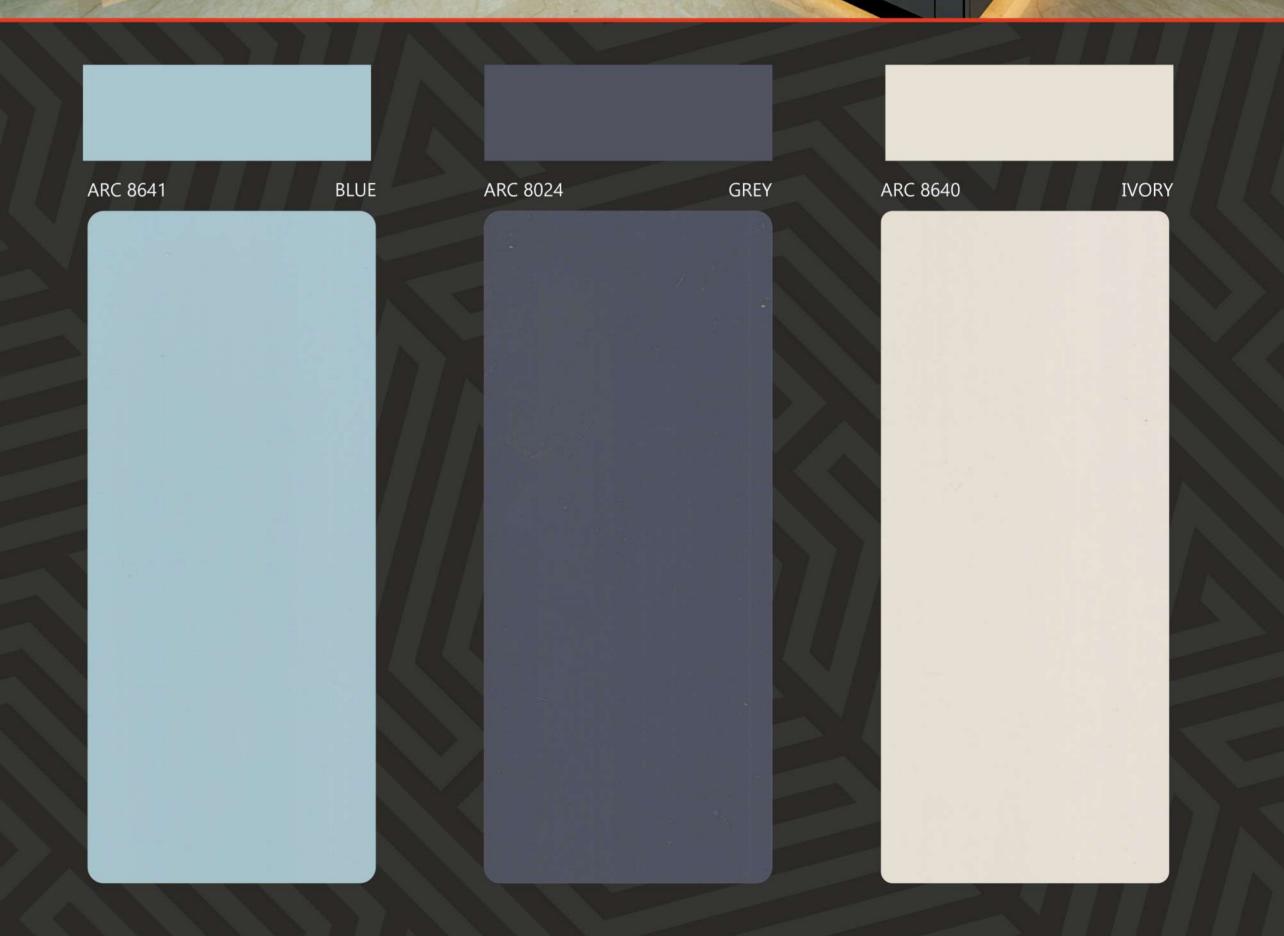

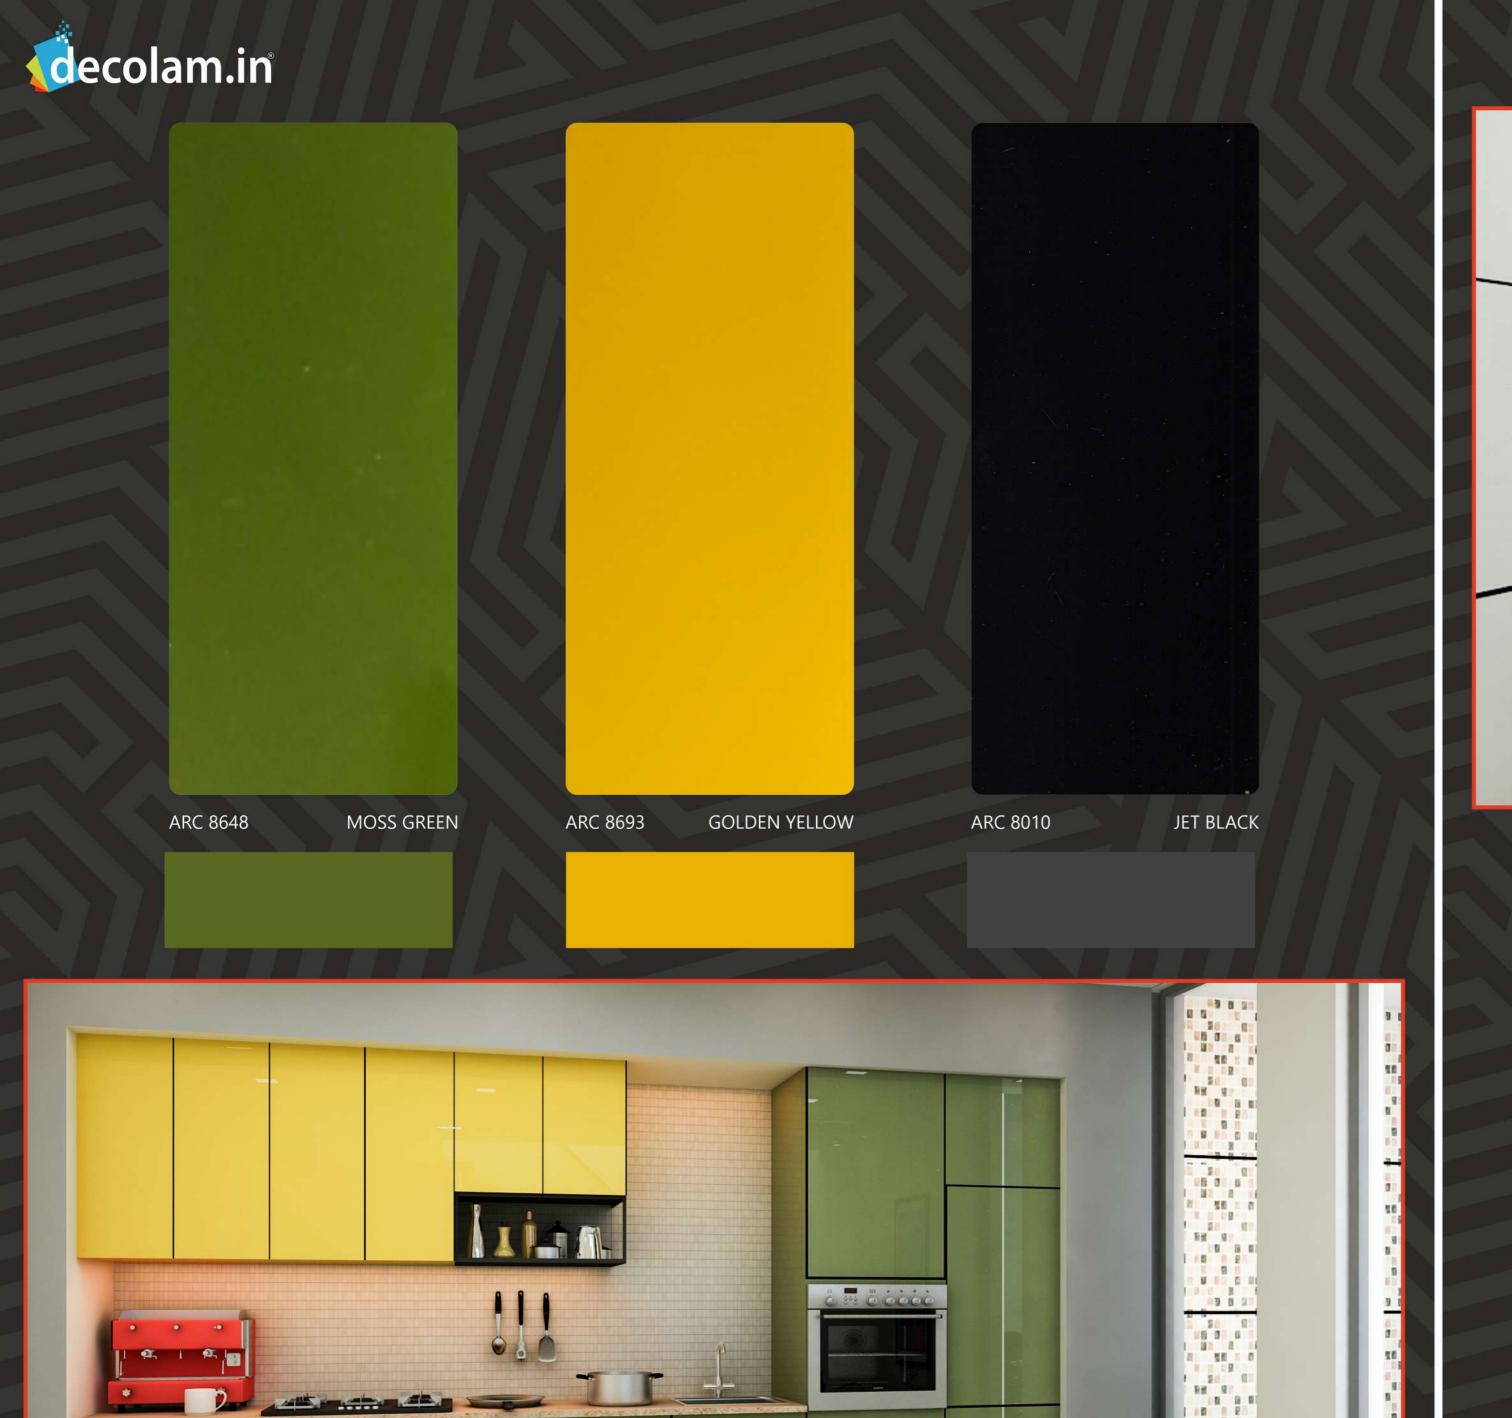

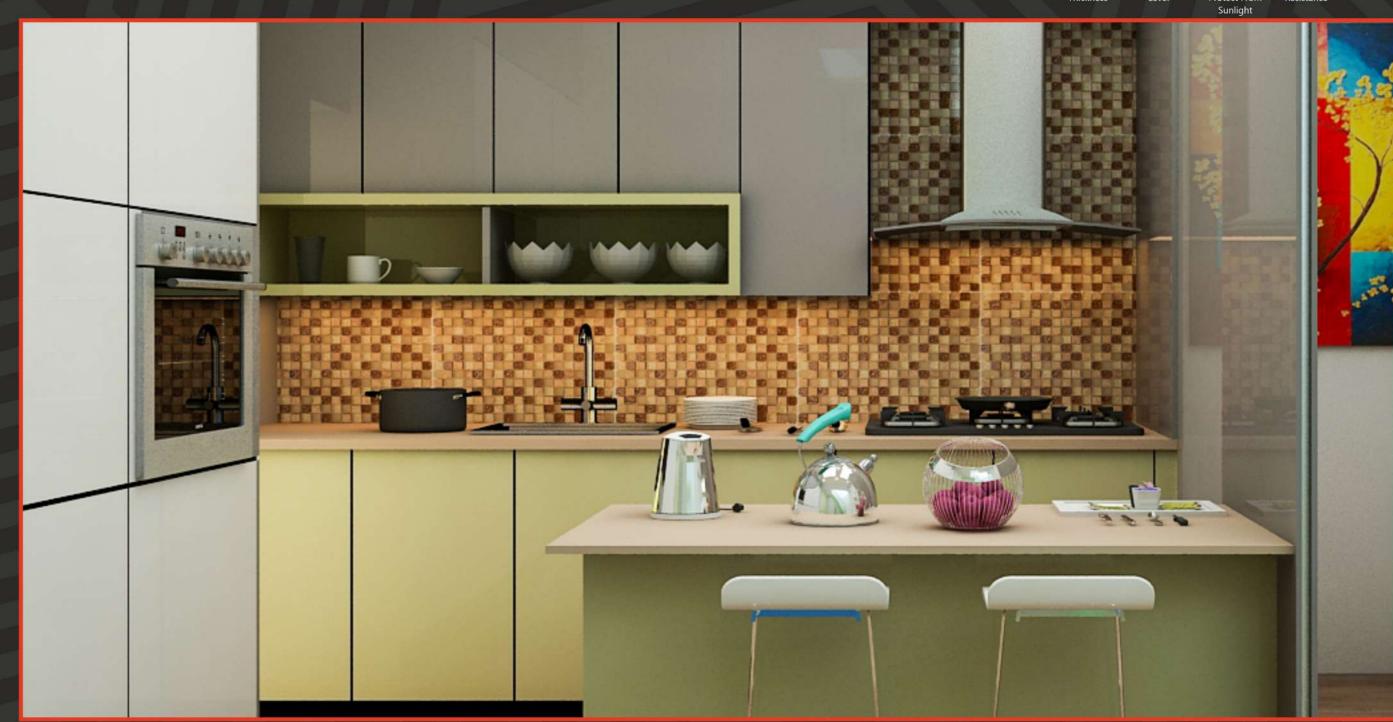































ARC 8002 BLACK CURRENT
























ICE PEARL























ARC 8629

GRAPHITE



HARVOR GREY

ARC 8613





decolam.in




ARC 8685

GOLDEN WHITE SPARKLE



GOLDEN SAND

ARC 8214

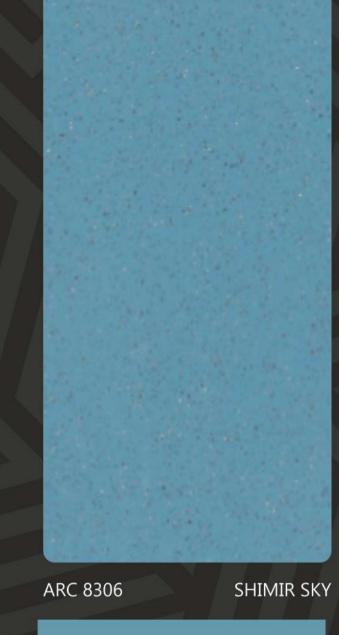








ARC 8671 PEACOCK BLUE SPARKL

ARC 8668

SCATTER GREY

ARC 8667

ANCIENT PEARL

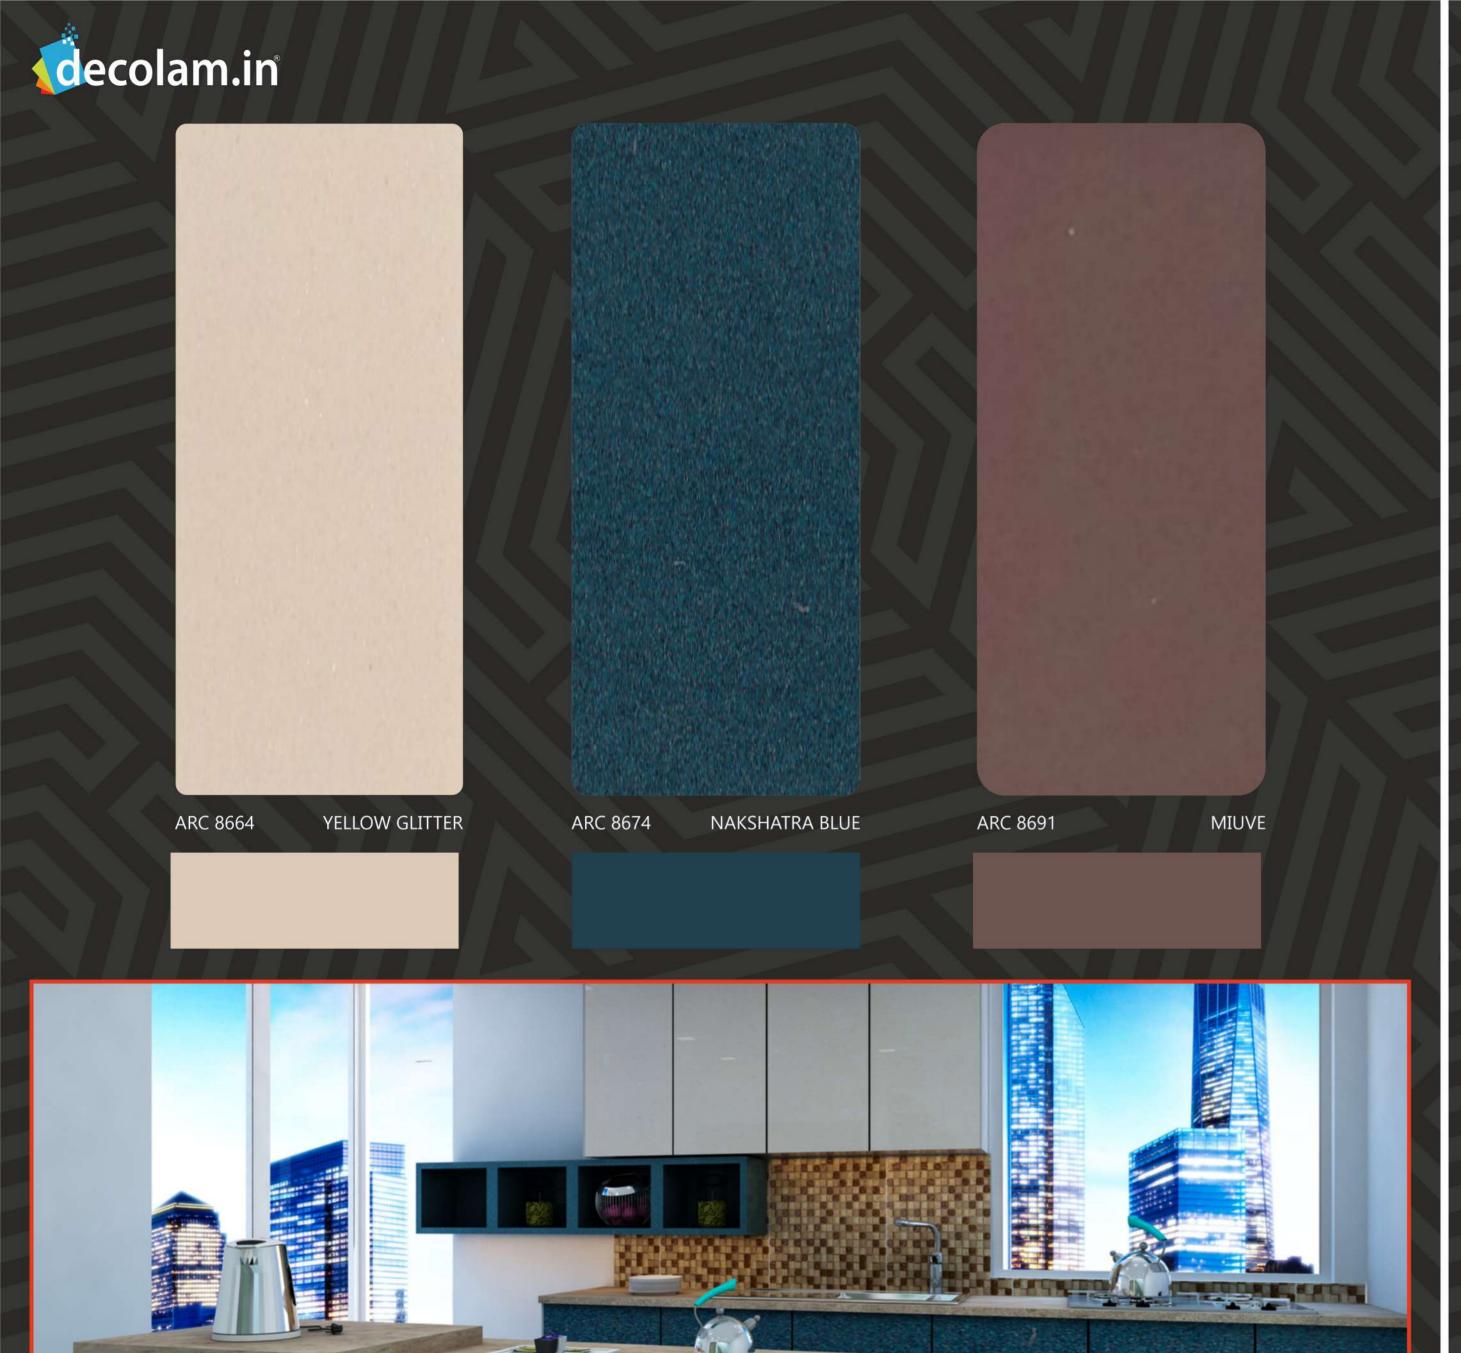







BLACK SPARKLE

ARC 8678

